

Electronic Shoe Instruction Manual

電子牌靴說明書



Please read the instructions carefully before using the machine

使用機器前請認真閱讀說明書

【 Contents】 目錄

1.1 Introduction To Electronic Shoe 電子牌靴簡介.....	01
1.2 Installation And Operation Of Electronic Shoe	02
電子牌靴的安裝與操作	
Overall Picture Of Electronic Shoe 電子牌靴整體圖	02
Back View Of The Electronic Shoe 電子牌靴背面圖	02
Installation Procedure 安裝步驟	03
Usage Steps 使用步驟	06

Electronic shoe instruction manual

電子牌靴說明書

1. 1 Introduction to Electronic Shoe 電子牌靴簡介

The electronic card shoe is an intelligent card-distribution device integrated into the casino table system. It is applicable to Baccarat game. This device uses the built-in recognition system (image recognition) to automatically read and record each playing card, and exchanges real-time data with the background system.

電子牌靴是集成於casino桌台系統中的智能發牌設備，適用於百家樂遊戲。該設備通過內建的識別系統（圖像識別），實現對每張撲克牌的自動讀取與記錄，並與後台系統進行實時數據交互。

During the operation of the system, the electronic card shoe can automatically record the distribution sequence and card information of each game session, and synchronize it to the game record module, which is used to generate real-time reports, game histories, player result statistics, and other functions. This device supports card-distribution process control, anti-leakage card and anti-mistake card safety mechanisms, effectively reducing human operation risks and improving game fairness and operational efficiency.

在系統運行過程中，電子牌靴可自動記錄每局遊戲的發牌順序、牌面信息，並同步至遊戲記錄模塊，用於生成實時路單、遊戲歷史、玩家結果統計等功能。該設備支持發牌流程控制，防漏牌、防錯牌等安全機制，有效減少人為操作風險，提升遊戲公正性與操作效率。

 
The electronic card shoe connects to the main control system through the communication port and forms a linkage with the electronic ticket system, betting record system, monitoring system, and other modules, providing key support for the casino to achieve a highly integrated and traceable game management system.

電子牌靴通過通信端口接入主控系統，與電子路單系統、投注記錄系統、監控系統等模塊形成聯動，為賭場實現高度集成化和可追溯化的遊戲管理體系提供關鍵支撐。


1.2 Installation and operation of electronic shoe

電子牌靴的安裝與操作

1. Overall picture of electronic shoe 電子牌靴整體圖:

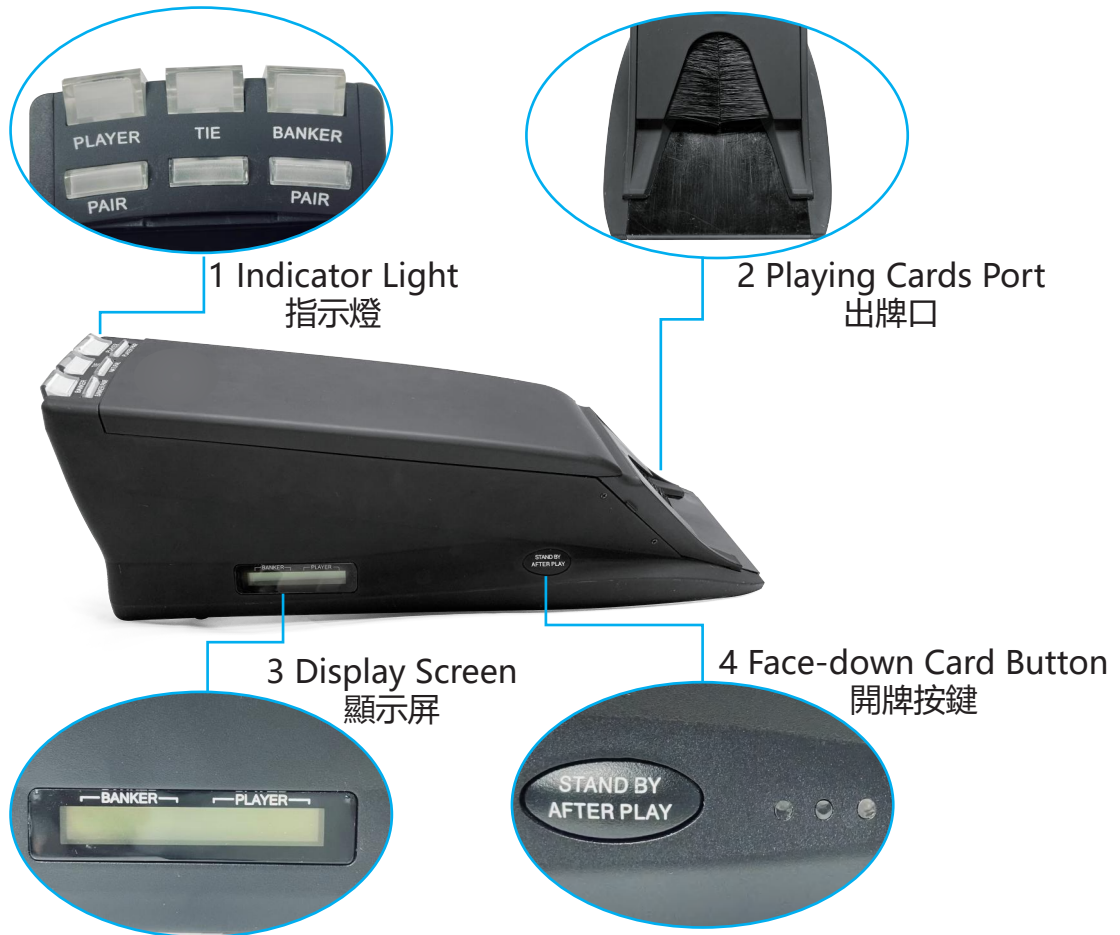

 
2. Back view of the electronic shoe 電子牌靴背面圖:

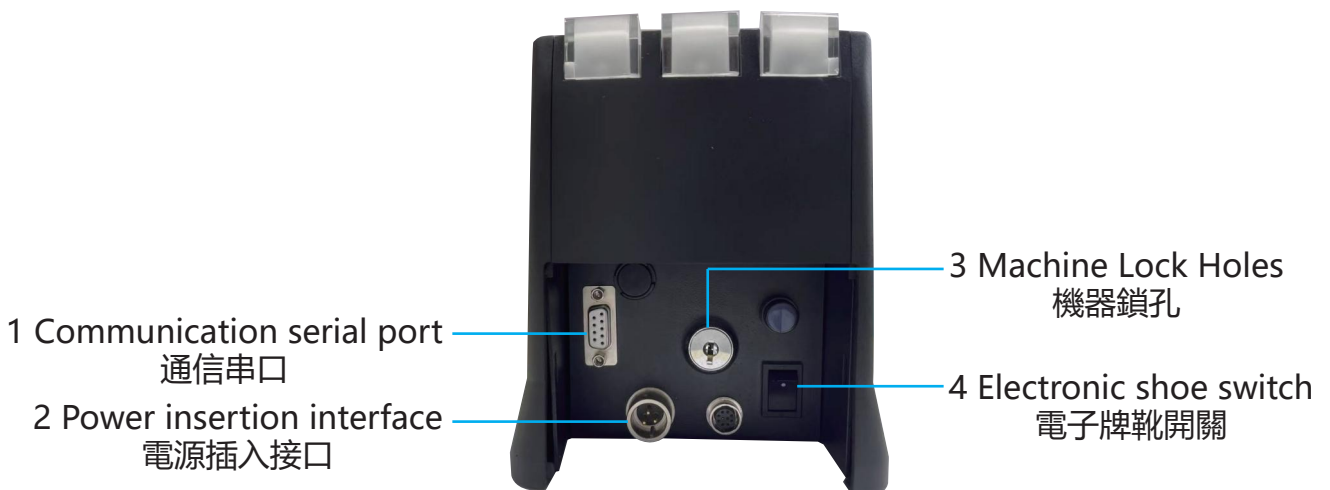

Installation Procedure 安裝步驟:

(1) Check if the route list system has been installed and is operating normally. If so, please open the route list system and proceed to the next step.

 檢查路單系統是否已安裝並在正常使用狀態，若是，請打開路單系統再進行下一步；

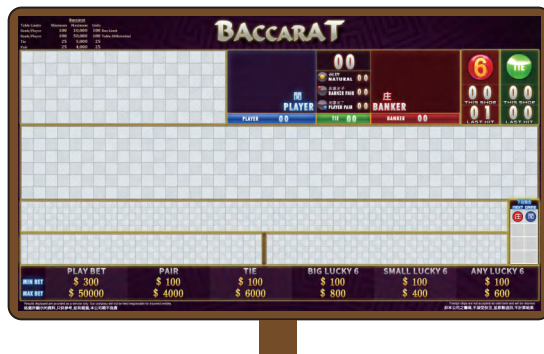


(2) Connect the computer host and the electronic signboard using the "1 communication serial port" of the provided communication cable.

使用配備的通信線連接電腦主機與電子牌靴的 [1 通信串口]；

(3) Insert the output end of the provided power adapter into the "2 power insertion port" of the electronic signboard, and connect the input end to the power supply.

 將配備的電源適配器的輸出端插入電子牌靴的 [2 電源插入端口]，將輸入端接入電源；

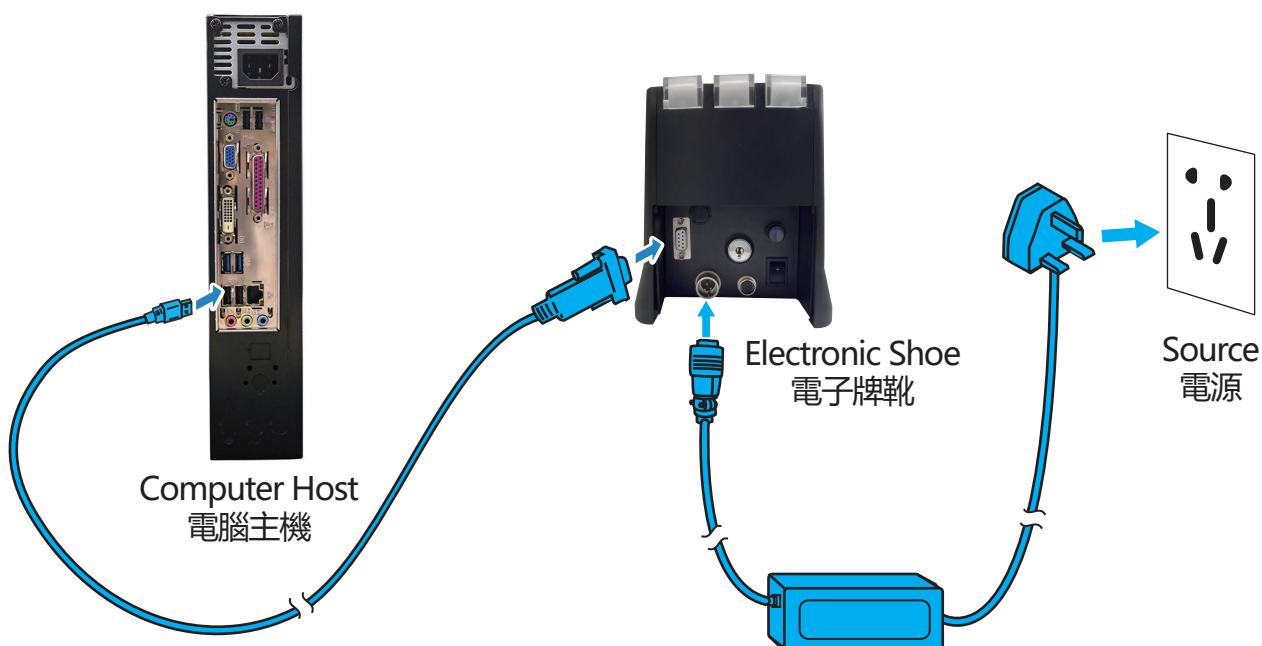

(4) Press the toggle switch "4 electronic signboard switch" of the electronic signboard and set it to the "." position or the "-" position. At this point, the electronic signboard will make a "drip" sound, and its display will show "STAND BY", indicating that the electronic signboard is functioning normally.

按下電子牌靴的撥動開關 [4 電子牌靴開關]，使其處於 [.] 檔或 [-] 檔後。電子牌靴發出 [滴] 的聲音，同時電子牌靴的顯示屏顯示 [STAND BY]，即電子牌靴可正常工作。

(5) At this point, a pop-up window appears in the route sheet system (as shown in the following figure). Click the "连接/Connect" button in the window. If the route sheet is still displayed in the pop-up window, please go to the settings of the route sheet system and check whether the "Boot Com" setting in the electronic sign is set to "Auto" or the port "COM1/2/3..." (as shown in the following figure). If it is set to "Auto", please check if the communication cable is properly connected; if it is set to "COM1/2/3..." Check if the communication line is properly connected to the corresponding communication interface of the computer's main unit and is securely attached. If the pop-up window does not appear after this, it indicates that the electronic sign has been configured successfully. Then, exit the settings.

此時路單系統彈出窗口(如下圖)，點擊窗口的 [連接/Connect] 按鈕。若路單仍在彈出窗口，請進入路單系統的設置，檢查電子牌靴設置的 [Boot Com] 是選擇了 [Auto] 還是端口 [COM1/2/3...] (如下圖)。若選擇的是 [Auto]，請檢查通信線是否已連接好；若選擇的是 [COM1/2/3...]，檢查通信線是否連接到電腦主機對應的通信接口並已連接好。彈窗不在彈出後代表電子牌靴已配置完畢，退出設置。

① | Note: Our company recommends using the "Auto" port.

注意：本司推薦使用 [Auto] 端口。

 


Electronic shoe setting page

電子牌靴設置頁面

(6) Open the cover of the electronic card tray (the card tray keeps making beeping sounds until the cover is properly placed). Put in the cleaned special playing cards, then close the cover.

打開電子牌靴牌腔的蓋板（牌靴一直發出滴滴聲，直到感應到蓋板蓋上），放入洗好的專用撲克牌，再蓋上蓋板，

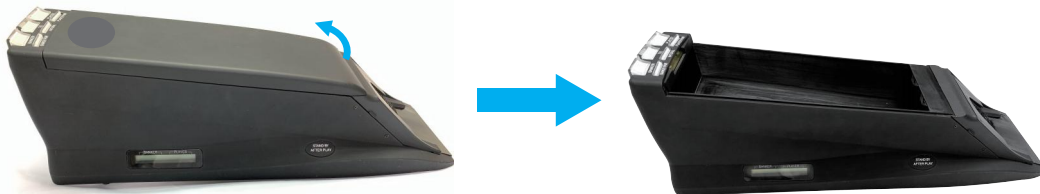

(7) Press the card slot to hold the poker cards and slide them out. Observe whether the poker card display area at the top right corner of the road sheet page synchronously shows the poker cards. If it does, after completing the card distribution according to the rules, please press the "4 Deal Card Button" (STAND BY AFTER PLAY) on the electronic card boot. Observe whether the poker cards on the road sheet page have also read the card faces of each card, and at the same time, the "3 Display Screen" of the electronic card boot also shows the card data. If so, the electronic card boot has been set up and can be used normally. If not, please contact the after-sales service.

從牌口按住撲克牌將撲克牌滑出，觀察路單頁面右上角的撲克牌顯示區是否同步顯示撲克牌，若顯示，按發牌規則發完牌後，請按下電子牌靴的 [4 開牌按鍵] (STAND BY AFTER PLAY)，觀察路單頁面的撲克牌是否也讀取了每張撲克牌的牌面，同時電子牌靴的 [3 顯示屏] 也顯示了牌面數據，若是，則電子牌靴已設置完畢，可正常使用。若否，請聯系售後。



Usage steps 使用步驟:

(1) Open the cover of the electronic card box (the card box keeps making beeping sounds until the cover is closed), put the washed special playing cards in, then close the cover.

打開電子牌靴牌腔的蓋板（牌靴一直發出滴滴聲，直到感應到蓋板蓋上），放入洗好的專用撲克牌，再蓋上蓋板。

(2) The dealer follows the card dealing rules, holds the playing cards at the card opening and slides them out to deal the cards. After dealing all the cards, the dealer presses the "4 Deal Button" (STAND BY AFTER PLAY) on the side of the electronic card box. The card face information is synchronized with the game result to the road ticket system, and the corresponding result indicator light on the electronic card box lights up. Repeat this step to complete the card dealing and deal entry for each game.

荷官按發牌規則，從牌口按住撲克牌將撲克牌滑出進行發牌，發完牌，荷官開牌後，按下電子牌靴側面的 [4 開牌按鍵] (STAND BY AFTER PLAY)，將牌面信息與對局結果同步至路單系統，並且電子牌靴的對應的結果指示燈亮起。重復此步驟完成每一局遊戲的發牌與開牌錄入。

(3) If additional cards are needed, press the "4 Deal Button" (STAND BY AFTER PLAY) again after completing the card replenishment, and synchronize the card face information to the road ticket system.

若需要補牌，則在補完牌後再按下 [4 開牌按鍵] (STAND BY AFTER PLAY)，將牌面信息同步至路單系統。

(4) If the dealer deals too many cards, the electronic card box will hold the cards and prevent them from sliding out, and an alarm sound will be emitted. At this time, the casino manager needs to insert the machine key into the "3 Machine Lock Hole" on the back of the electronic card box, rotate it counterclockwise by 90°, then rotate it back, and the electronic card box will return to normal. Remove the machine key and continue to use it normally.

若荷官多發牌，電子牌靴會卡住撲克牌不讓牌滑出，並且發出警報聲，此時需要賭場經理拿機器鑰匙插入電子牌靴背面的 [3 機器鎖孔] 逆時針旋轉90°，再旋轉回來，電子牌靴恢復正常，拔出機器鑰匙即可繼續正常使用。

